



**SolisCloud** 


# Operation Guide V1.0

#### **01** Register a account



Open Web: https://www.soliscloud.com/


Step 1: Click "Sign up now", to jump to the "register" interface.

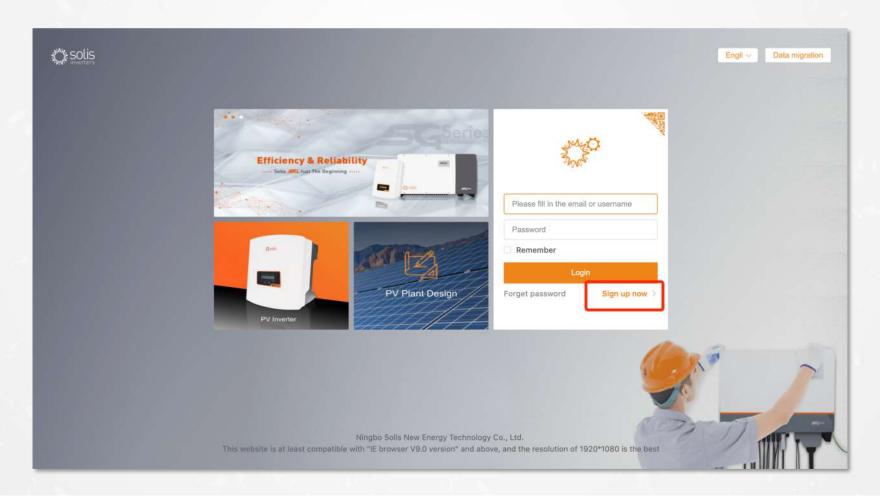

#### **01** Register a account




Step 2: If you are a installer, you need register as organization; If you are a owner, you need register as owner

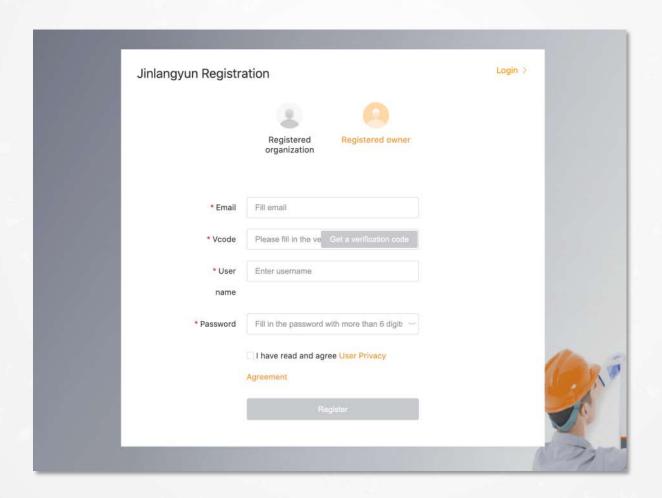

#### 02 Add a new plant




Step 1: Click "Plant Overview > Add plant", to jump to the "Add Plant" interface.

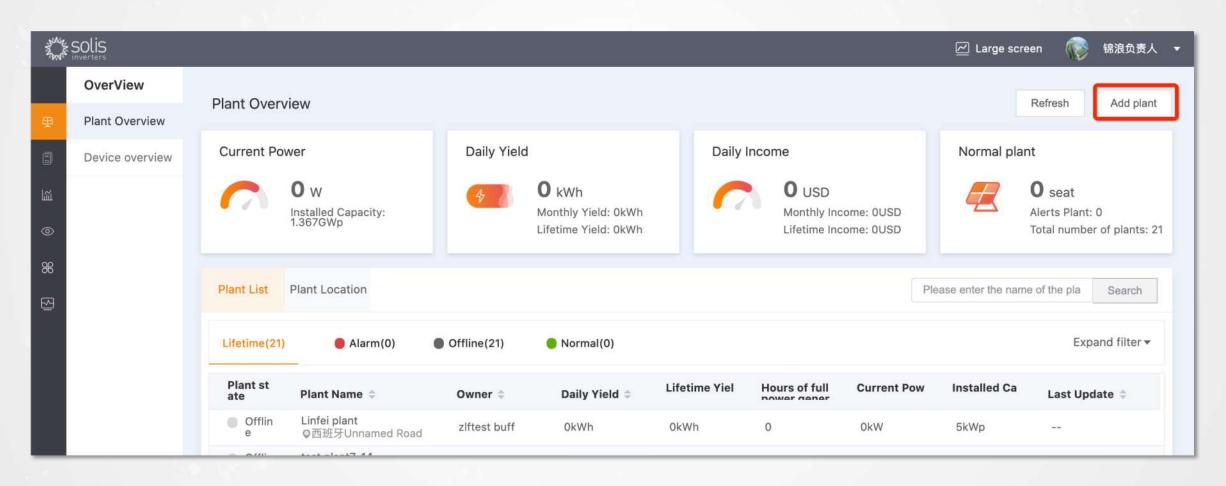

#### 02 Add a new plant



#### Step 2: Add Owner and Visitor

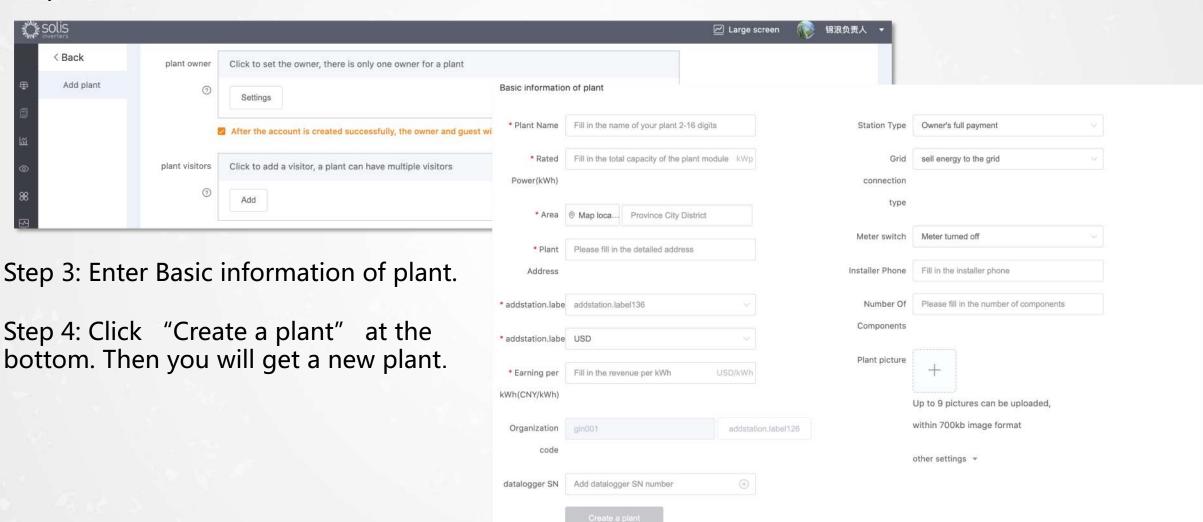

## 03 Bind the datalogger




When you add a new plant, you can bind datalogger to the new plant.

Basic information	n of plant				
* Dieut Mense	Till to the second of considerat 2 46 diale		Challes Torre	0	
* Plant Name	Fill in the name of your plant 2-16 digits		Station Type	Owner's full payment	
* Rated	Fill in the total capacity of the plant module   k	Wp	Grid	sell energy to the grid	
Power(kWh)			connection		
• Area	Map loca Province City District		type		
* Plant	Please fill in the detailed address		Meter switch	Meter turned off	
Address			Installer Phone	Fill in the installer phone	
* addstation.labe	addstation.label136		Number Of	Please fill in the number of components	
* addstation.labe	USD		Components		
			Plant picture		
* Earning per	Fill in the revenue per kWh USD/k	Wh		+	
kWh(CNY/kWh)				Up to 9 pictures can be uploaded,	
Organization	gin001 add	Istation.label126		within 700kb image format	
code				other settings 💌	
datalogger SN	Add datalogger SN number	⊕ ]			
	Create a plant				

#### 03 Bind the datalogger




Besides, you can conduct the following steps as below: Open single plant, click "Add datalogger"

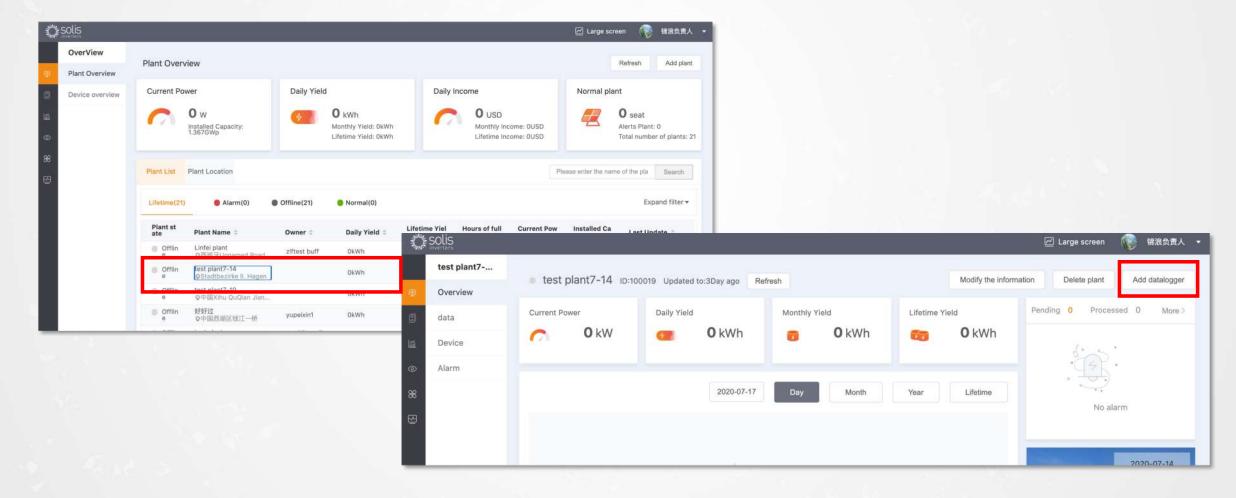

#### **04** View plant information




Click "Plant Overview", to jump to the plant list interface, on which information such as power installed, real-time power, daily yield, and alarm is displayed.

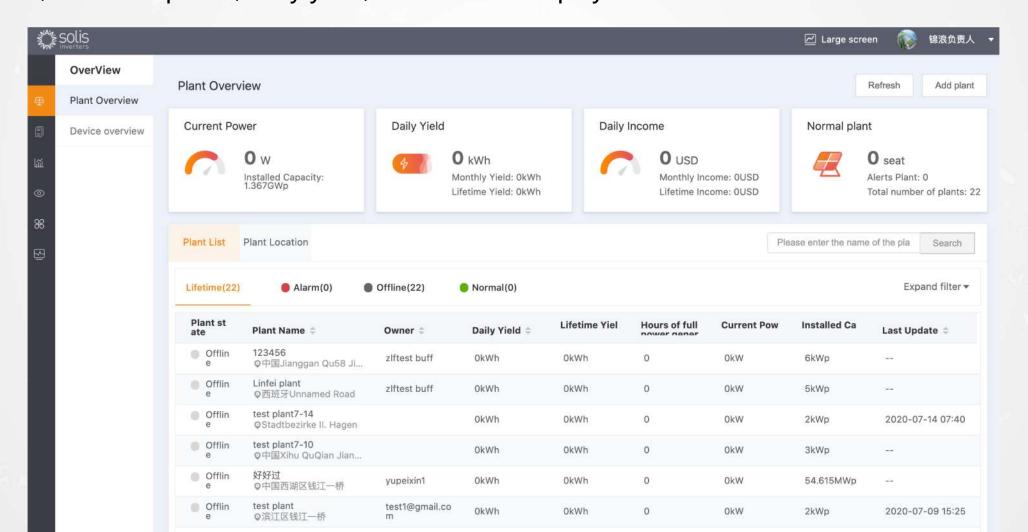

#### **04** View plant information




Click "data", to jump to the plant data interface. view and edit plant data.

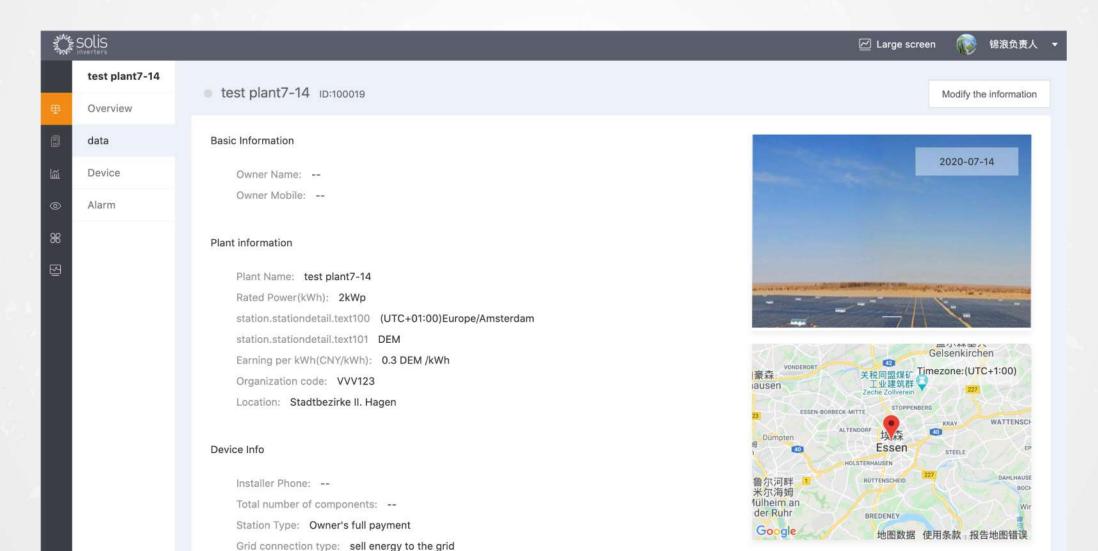

#### **04** View plant information




Click "Device", to jump to the device interface. view and manger inverter and datalogger.

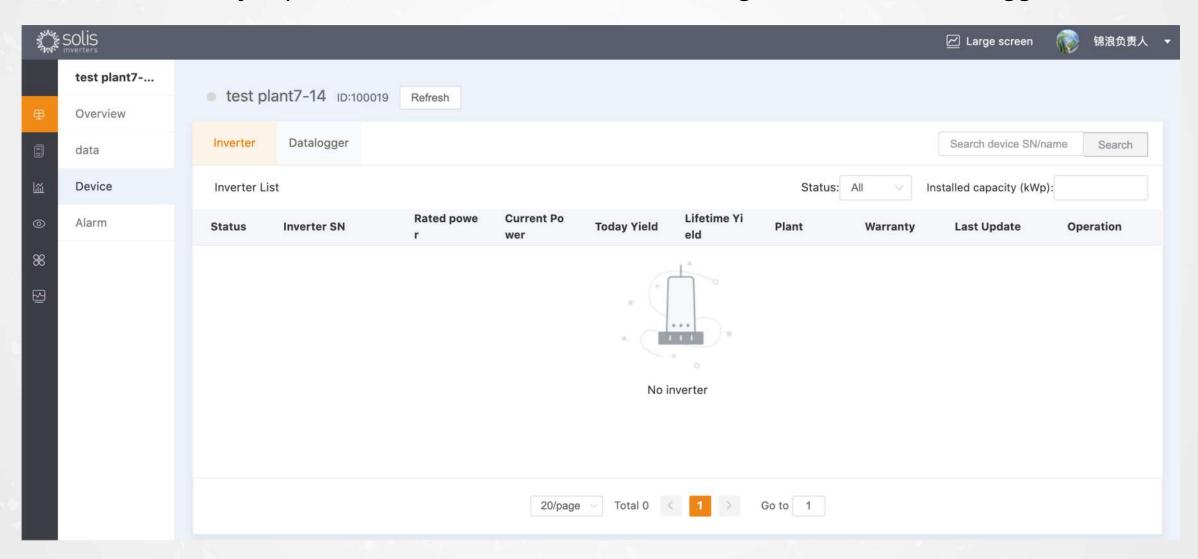


#### **05** Relate the the owner to plant



When you add a new plant, you can relate the the owner to the new plant.

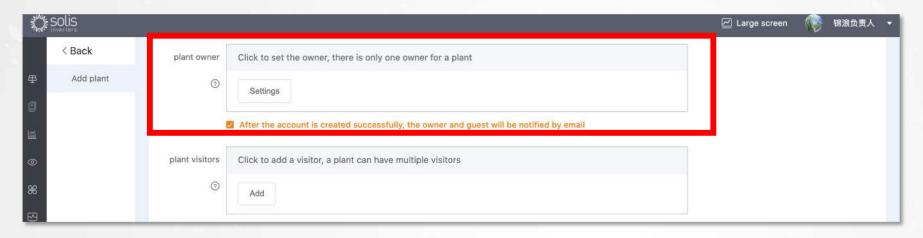

Besides, you can open single plant, click "Modify the information"

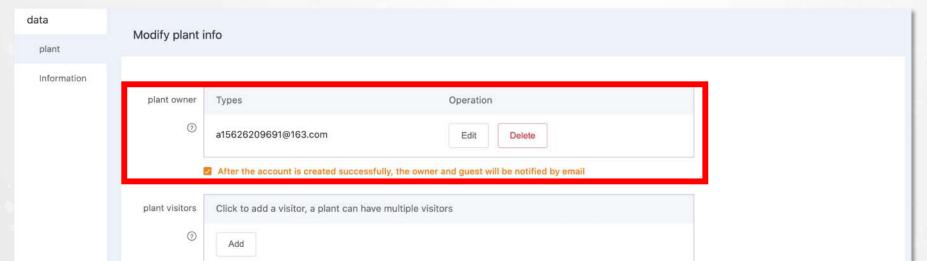

## 06 Relate the the installer to plant



When you add a new plant, you can relate the the installer to the new plant.

J.W.	SOLIS					∠ Large sci	reen 🌘	锦浪负责人	•
	< Back	* Rated	Fill in the total capacity of the plant modul	le kWp	Grid	sell energy to the grid			
學	Add plant	Power(kWh)			connection				
8		* Area	Map loca Province City District		type				
(i)		* Plant	Please fill in the detailed address		Meter switch	Meter turned off			
88		Address			Installer Phone	Fill in the installer phone			
<b>⊠</b>		* addstation.labe	addstation.label136	· ·	Number Of	Please fill in the number of components			
_		* addstation.labe	USD	v	Components				
		* Earning per	Fill in the revenue per kWh Us	SD/kWh	Plant picture	+			
	kWh(CNY/kWh)					Up to 9 pictures can be uploaded,			
		Organization	gin001	addstation.label126		within 700kb image format			
		code				other settings *			
		datalogger SN	Add datalogger SN number	$\oplus$					
		1	Create a plant						

## 06 Relate the the installer to plant



Besides, you can open single plant, click "Modify the information"

ZW.	SOLIS						Large screen	锦浪负责人	<b>V</b>
	data	* Plant Name	Androidplant		Station Type	Owner's full payment	V-		
<b>#</b>	plant	* Rated	5	kWp	Grid	surplus energy to the grid	~		
8	Information	Power(kWh)			connection				
(a)		* Area	⊚ Map loca China		type				
<b>88</b>		* Plant	, Zhejiang Sheng, China		Meter switch	Meter turned off	Y		
⊵		Address			Installer Phone	15626209691			
		* addstation.labe	n.labe (UTC+08:00) 北京,重庆,香港特别行政区,		Number Of	3			
		* addstation.labe	CNY	· V	Components				
		* Earning per	0.6	CNY/kWh	Plant picture	+			
		kWh(CNY/kWh)				Unit of the second	4-4		
		Organization code	Fill in the organization cod	de addsta	tion.label126	Up to 9 pictures can be uploa within 700kb image format	dea,		
			Save information	Back		other settings 🔻			

#### **07** Add sub-leve organizations




Step 1: Click "service -> Organization manage -> New organization"

Step 2: Fill in information in right side -> create organization

#### Notes:

- Please ensure that the representative's full name of the sub-level distributor is completely correct because it will be used for authentication.
- An email will be sent automatically to the email address you filled in

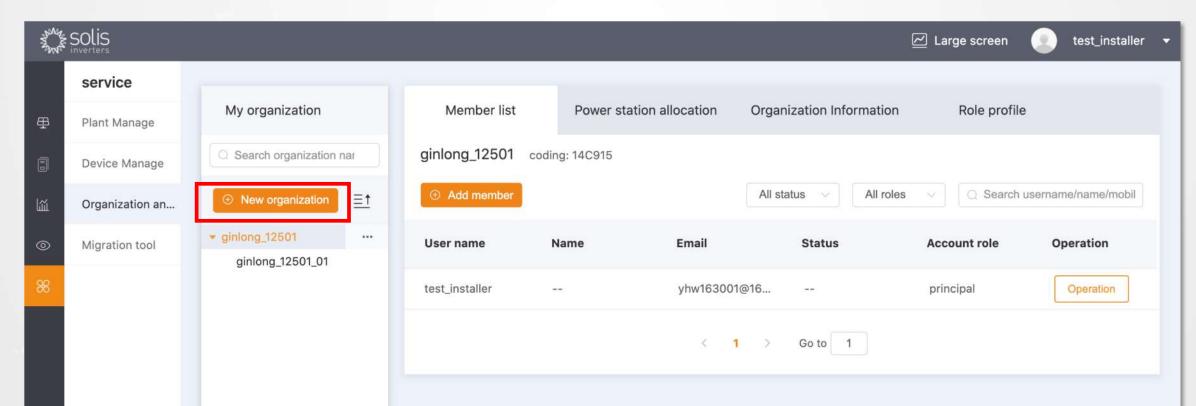

#### 08 Add member for your organizations




Step 1: Click "service -> Organization manage -> Add member"

Step 2: Fill in information in right side -> Create an account

#### Notes:

- There are 6 types of account role. You can check the differences on the page of "Role profile".
- If your member registered account on the website or APP as a member user, you can accept his application and choose a proper role for him.

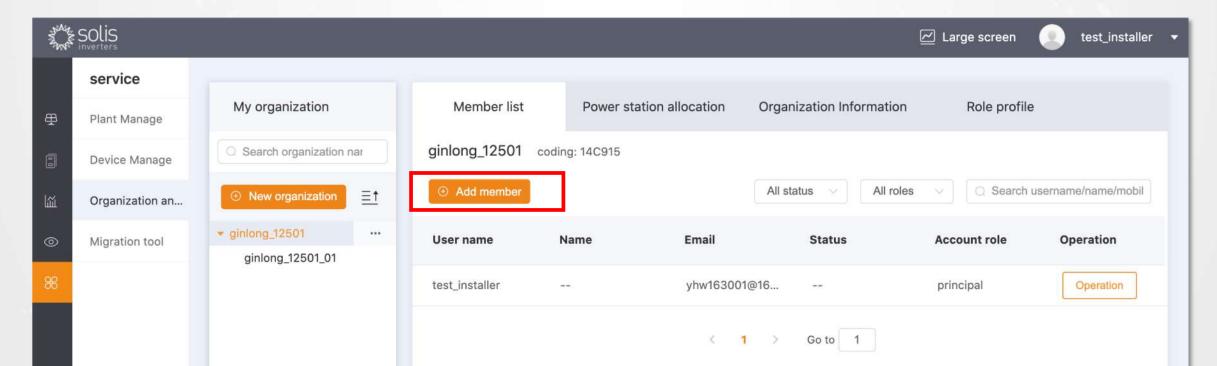


#### 09 Get plant report



Step 1: Click "Report -> plant report

Step 2: Choose "Daily Report" or "Monthly Report" or "Annual Report" or "Cumulative Report" -> selected plants, and set a time range -> Click "Export"

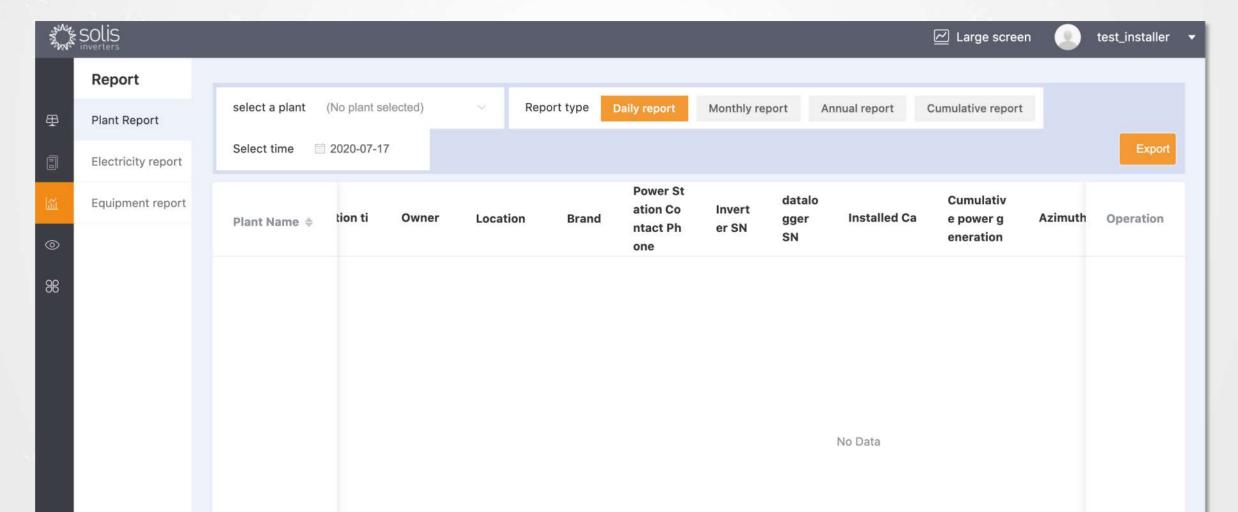

#### 10 Get electricity report



Step 1: Click "Report -> electricity report

Step 2: Choose "Monthly Report" or "Annual Report" or "Cumulative Report" -> set

a time range -> Click "Export"

